

DS9208: Programming Barcodes for DS9208

Configuration name in Utility : DS9208
Last Modified : 18-Aug-15
Windows Filename : Config File_DS9208_DS9208_2015.08.18.scncfg
Plug-in Name : DS9208-COMMON SR MODELS-022



Instructions: Scan barcodes in order, starting with programming barcode 1.

1/7. Set Factory Defaults



Symbology (bar code type) Settings

2/7. Enable Codabar,Codabar Length 1 0,Codabar Length 2 0,Enable NOTIS Editing



3/7. Upper Case Codabar Upper or Lower



Modify Data

4/7. Suffix 1 : Enter,7,0,1,3,Scan Data Transmission Format <Data><Suffix 1>



General Parameter Settings

5/7. Enable Low Power Mode Low Power Mode,Beeper Volume Low,Beeper Tone Off,Do Not Beep Beep After Good Decode



6/7. Suppress Power-Up Beeps Suppress Power Up Beeps



DS9208: Programming Barcodes for DS9208

Configuration name in Utility : DS9208
Last Modified : 18-Aug-15
Windows Filename : Config File_DS9208_DS9208_2015.08.18.scncfg
Plug-in Name : DS9208-COMMON SR MODELS-022



7/7. Configuration File DS9208



Firmware:

CAAASS00-006-R01

Supported Scanner Models for Plug-in :

DS9208-SR00004CNWW

DS9208-SR00004NNWW

DS9208-SR00004NNY

DS9208-SR0000WCNWW

DS9208-SR0000WNNWW

DS9208-SR4NNU21ZY